


MOODY 336 - CHAIN LOCKER MOD KIT

KIT PARTS KIT


1 opp. F.W.D CHAIN LOCKER (JOB 01)  
TRUCK FACE.

---

1 opp  $\frac{1}{2}$ " WBP as below

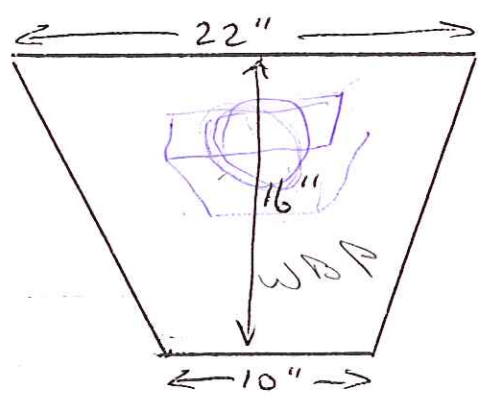

1 opp  $\frac{1}{2}$ " WBP as below (PATTERN SUPPLIED)

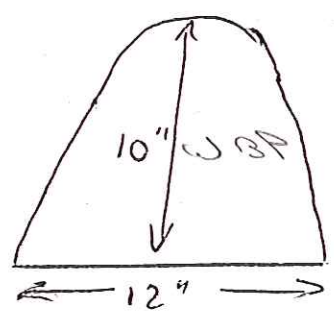

4 opp 24" x 2" x  $\frac{1}{2}$ " WBP.

M336 Modification Kits

L1070 ONWARDS to L 1078 etc.

- 4 x 6" Strips 2oz C.S.M.
- 250 ml. Gel (3452 65PA).
- 500 ml. White Topcoat.
- 500 ml. Resin.
- 100 ml. Catalyst.
- 1 x  $\frac{3}{4}$ " Skin Fitting & Back Nut (Scoop type).
- 1 x  $\frac{3}{4}$ " Seacock.
- 1 x  $\frac{3}{4}$ " 90 P.P.A
- 2 $\frac{1}{2}$  mtrs  $\frac{3}{4}$ " Clear PVC Hose.
- 1 x  $\frac{3}{4}$ " Non Return Valve.
- 2 x  $\frac{3}{4}$ " BSP to  $\frac{3}{4}$ " PPA.
- 4 x size 10 Hose Clips.
- 2 x size 3 Hose Clips.
- 1 x  $\frac{1}{2}$ " WBP Seacock Backing Pad.
- 4 x 7" Cable Ties.
- 4 x  $\frac{1}{2}$ " x 6 Pan Head Self Tap.
- 1 Tube IDL Mastic.
- 1 @ Stainless Steel Drain Tube.
- 3 @  $\frac{5}{8}$ " x 6 Pan Head Self Tap.
- 1 @ 1" Resin Brush.
- 2 @ 2" Resin Brush.
- 1 ltr Acetone.

26 x 2 - 1

L1067 moody  
1062 K.P.

L1060 to L1070

- 1 @ Chain lkr teak face bulkhead.
- 1 @ Kit Parts plywood kit.
- 4 @ 24" x 2" x 1" Softwood.
- 1 @ 6" Watertight inspection panel.
- 4 @ 6" Strips 2oz C.S.M.
- 1 @ 36" x 54" 2oz C.S.M.
- 250 ml Gel (3452 65 PA).
- 500 ml White Topcoat.
- ~~2 ltrs Resin.~~
- ~~200 ml Catalyst.~~
- 1 x  $\frac{3}{4}$ " Skin Fitting & Back Nut (Scoop type).
- 1 x  $\frac{3}{4}$ " Seacock.
- 1 x  $\frac{3}{4}$ " 90 P.P.A.
- 2 1/2 mtrs  $\frac{3}{4}$ " Clear PVC Hose.
- 1 x  $\frac{3}{4}$ " Non Return Valve.
- 2 x  $\frac{3}{4}$ " BSP to  $\frac{3}{4}$ " P.P.A.
- 4 size 10 Hose Clips.
- 2 size 8 Hose Clips.
- 1 x  $\frac{1}{2}$ " WSP Seacock Backing Pad.
- 1 Tube IDL Mastic.
- 1 @ Stainless Steel Drain Tube.
- 4 x 7" Cable Ties.
- 4 x  $\frac{1}{2}$ " x 6 Pan Head Self Tap.
- 24 @ 1" x 8 CSK Brass.
- 20 @ 1 1/4" x 8 CSK Self Tap.
- 8 @  $\frac{1}{2}$ " x 6 CSK Self Tap.
- 1 @ 1" Resin Brush.
- 2 @ 2" Resin Brushes.
- ~~1 ltr Acetone.~~

L1010 To L1056

1 @ Kit Parts Plywood Kit.  
4 @ 24" x 2" x 1" Softwood.  
1 @ 6" Watertight Inspection Panel.  
4 @ 6" Strips 2oz C.S.M.  
1 @ 36" x 54" 2oz C.S.M.  
500 ml White Topcoat.  
~~2 Itrs Resin~~  
200 ml Catalyst.  
1 @  $\frac{3}{4}$ " Non Return Valve.  
2 @  $\frac{3}{4}$ " BSP MI to  $\frac{3}{4}$ " P.P.A.  
4 size 10 Hose Clips.  
1 Tube IDL Mastic.  
1 @ Stainless Steel Drain Tube.  
4 @ 7" Cable Ties.  
4 @  $\frac{1}{2}$ " x 6 Pan Head Self Tap.  
~~24 @ 1" x 8 CSK Brass~~  
20 @  $1\frac{1}{4}$ " x 8 CSK Self Tap.  
8 @  $\frac{1}{2}$ " x 6 CSK Self Tap.  
3 @  $\frac{5}{8}$ " x 6 Pan Head Self Tap.  
1 @ 1" Resin Brush  
~~3 @ 2" Resin Brushes.~~  
~~1 Itr Acetone.~~

L1056 To L1059

1 @ Chain lkr teak face bulkhead.  
1 @ Kit Parts plywood kit.  
4 @ 24" x 2" x 1" Softwood.  
1 @ 6" Watertight Inspection Panel.  
4 @ 6" Strips 2oz C.S.M.  
1 @ 36" x 54" 2oz C.S.M.  
500 ml White Topcoat.  
~~2 ltrs Resin.~~  
200 ml Catalyst.  
1 @  $\frac{3}{4}$ " Non Return Valve.  
2 @  $\frac{3}{4}$ " BSP MI to  $\frac{3}{4}$ " P.P.A.  
4 size 10 Hose Clips.  
1 Tube IDI Mastic.  
1 @ Stainless Steel Drain Tube.  
4 @ 7" Cable Ties.  
4 @  $\frac{1}{2}$ " x 6 Pan Head Self Tap.  
24 @ 1" x 8 CSK Brass.  
20 @  $1\frac{1}{4}$ " x 8 CSK Self Tap.  
8 @  $\frac{1}{2}$ " x 6 CSK Self Tap.  
3 @  $\frac{5}{8}$ " x 6 Pan Head Self Tap.  
1 @ 1" Resin Brush.  
2 @ 2" Resin Brushes.  
~~1 ltr Acetone.~~